



WILD RIVER
TIMBER FLOORING

CARE & MAINTENANCE GUIDE FOR OILED FLOORS

We want you to understand the idiosyncrasies of your naturally oiled floor so you can best maintain and prolong its appearance and structural integrity. The below instructions are in relation to Wild River Timber flooring products from the Classic and Endeavour ranges only. It is mandatory, following installation of your floor, that it has a Whittle Waxes object oil or hardwax oil applied by an accredited installer. All floors must be cleaned with Whittle Waxes floor care.

NOTE: If you have a UV oiled floor, the oil is not mandatory.

DO'S

- ✓ Use a soft brush broom when sweeping your floor
- ✓ Use 'Whittle Waxes Floor Care Concentrate' when mopping at all times
- ✓ Use only foam mops when mopping floor
- ✓ Use your sink(s) in conjunction with a bucket to ensure each time your mop contacts the floor, it is not applying dirty water
- ✓ Use Whittle Waxes object or evolution oil to spot oil dry spots or areas of heavy traffic
- ✓ Have your floor re-oiled every 5 years as a minimum to floor ensure longevity and richness of colour. All areas with underfloor heating are required to be re-oiled every year
- ✓ Ensure all furniture legs and bases are covered in thick felt or rubber stoppers to avoid scratching
- ✓ Attend to spills immediately

DON'TS

- ✗ Do not use micro-fibre mops or brooms as this may draw oil from your floor
- ✗ Do not use a steam mop
- ✗ Do not use any bleach, ammonia or caustic cleaners to clean the floor
- ✗ Do not drag any heavy items/furniture across floor
- ✗ Avoid wear from stilettos or sharp heels where possible
- ✗ Do not use any other product to mop your floor than what is recommended. This may dry out or discolour your floor
- ✗ Do not attempt to sand, re-stain or change the look of your floor before consulting a Wild River Technician
- ✗ Do not exceed 22 degrees with underfloor heating